



锐宝智联
REALBOM

MAC address Flush SOP

Test Engineer: Yann

Date: 2023.12.09

Plan By: Yann

Date: 2023.12.09

Approval: Jim

Date: 2023.12.09




Preparations:

- Main Board（主板）
- Host PC Computer（主机）
- OTG Upgrade cable（OTG 升级线）

Steps of operation:


1 Switch and Flush

1.1 Install the RK USB Driver to PC(安装瑞芯微驱动)

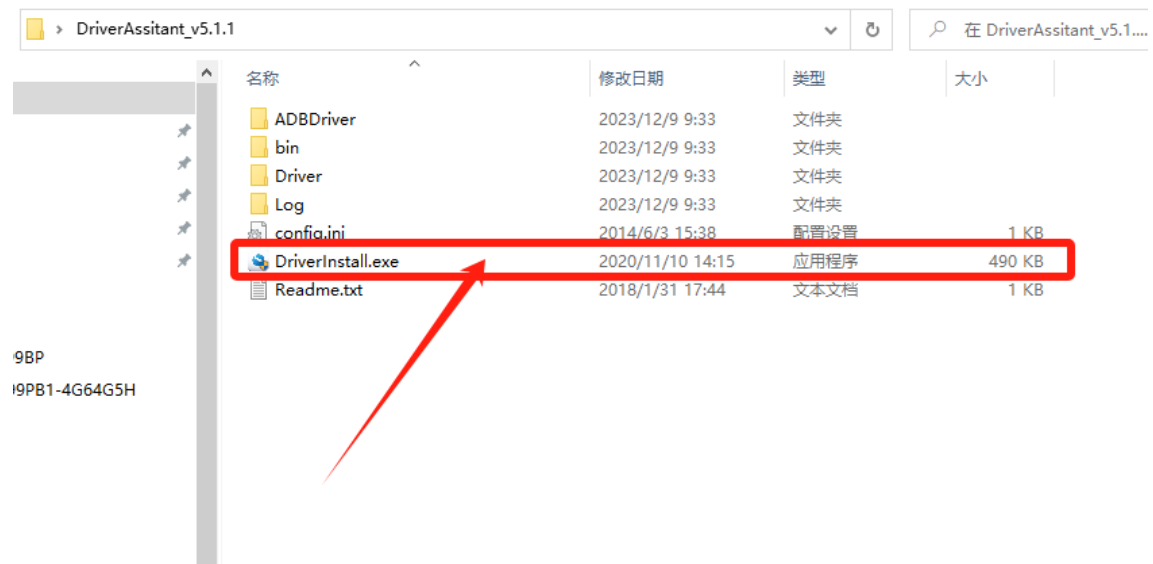


1.2 Connect the MB USB-OTG and PC with an upgrade cable (用升级线连接主板和 PC 主机)

01 Double click to open RKDevInfoWriteTool.exe (双击打开升级软件)

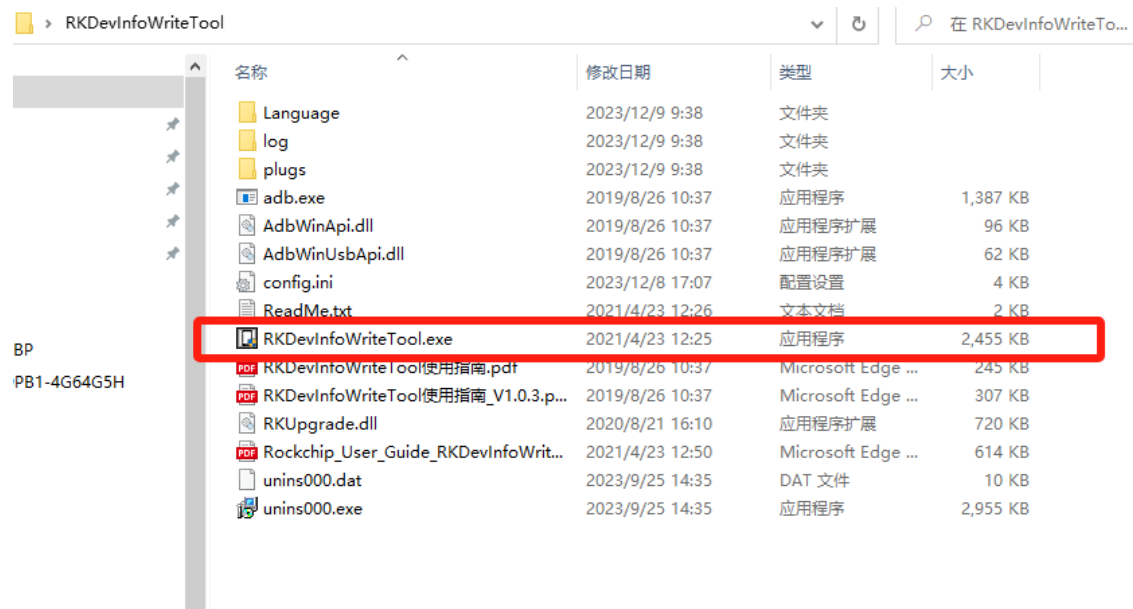


02 Connect the MB USB-OTG and PC with an upgrade cable, and ADB device should be found (数据线连接主板和 PC, 工具提示“发现一个 adb 设备”)

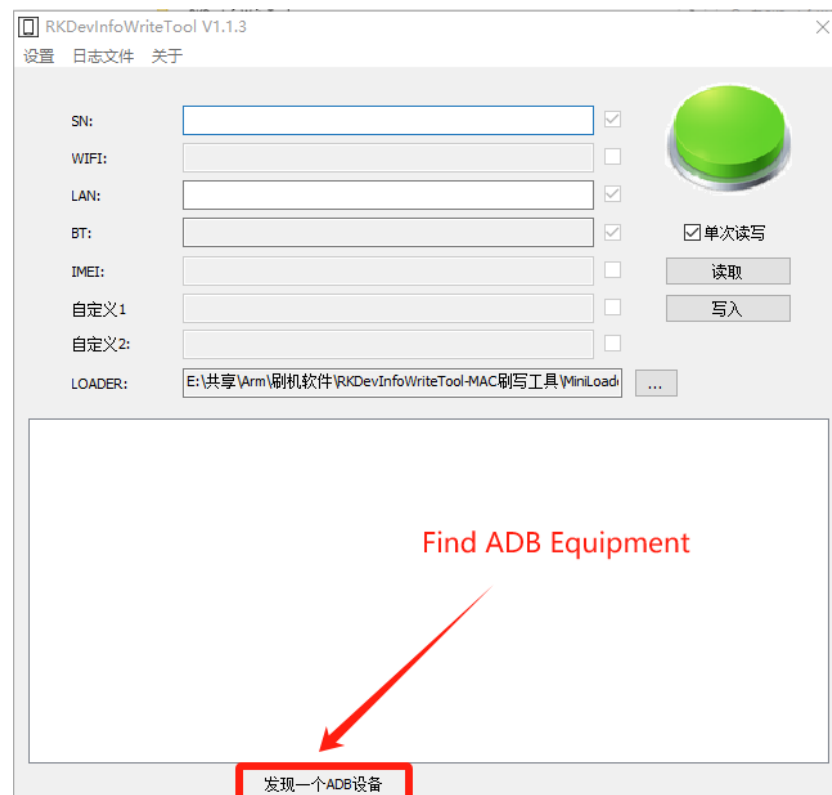




03 Enter the SN and MAC address and click the "写入" button (将 SN 号和 MAC 地址输入, 点击写入按钮)

Ps: SN number and MAC are consistent (SN 号和 MAC 一致)

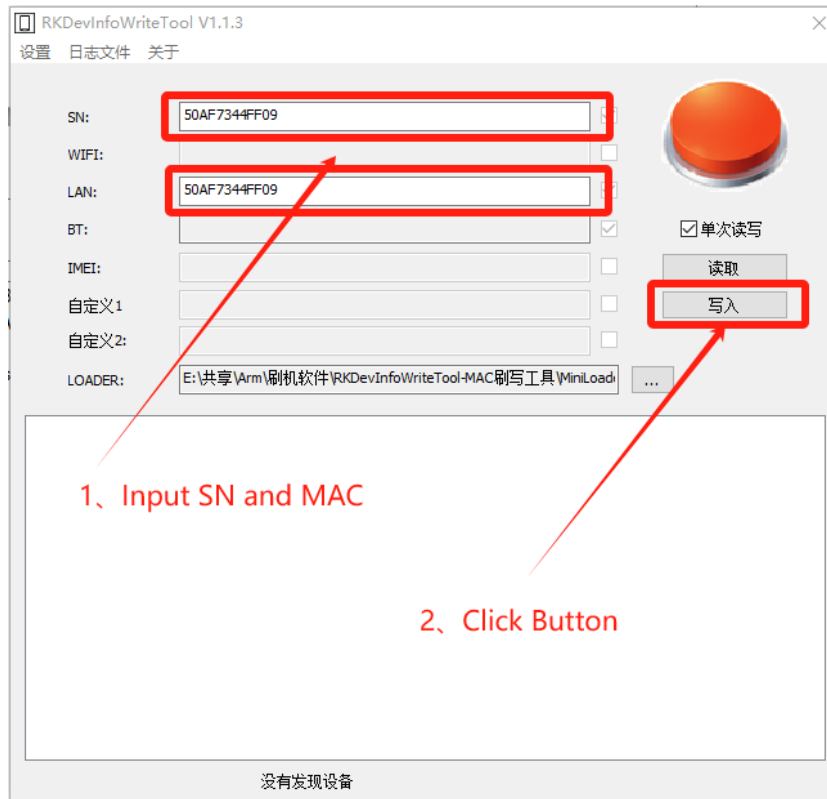

03 The motherboard will automatically restart into upgrade mode, after the flush is completed, the motherboard will automatically restart (点击“写入”按钮，主板会自动重启进入升级模式，刷写完成后主板会自动重启)

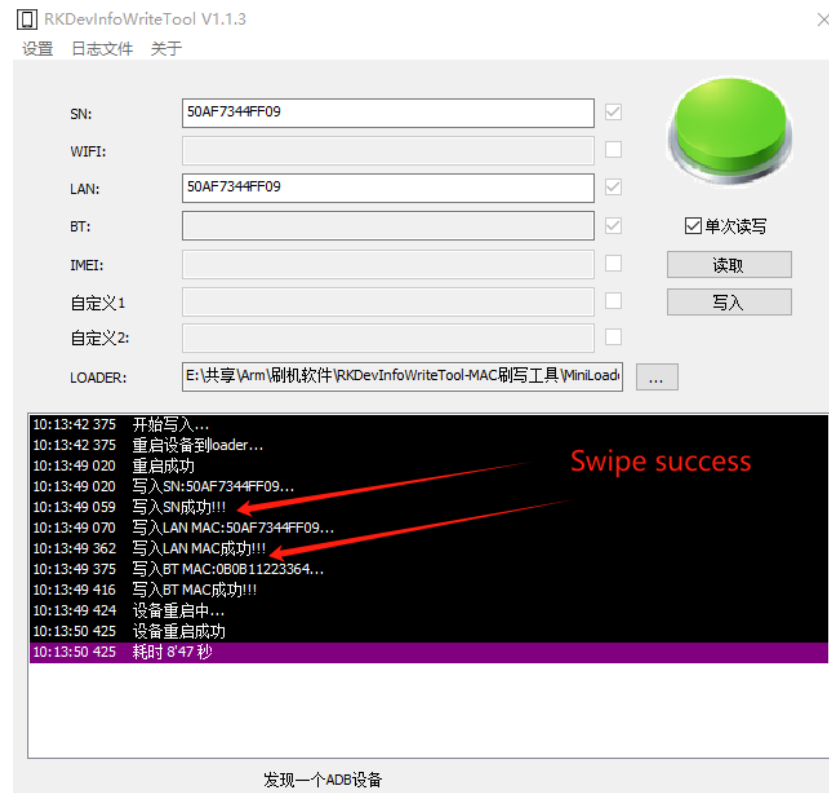



2 Loader Flush

03 If the direct writing is not successful, you can restart the motherboard after holding the motherboard loader key. After the motherboard enters the loader mode, enter the SN number and click Write (如果直接写入不成功, 可以按住主板 loader 键后重启主板, 主板进入 loader mode 后, 输入 SN 号后点击写入)

